


AT&T CopperLine Installation Manual

AT&T CopperLine Panels


24-Port Shielded Blank 19" Panel for 4 Pre-Terminated Cassettes

AT&T P/N 13S00NV024P-BK51

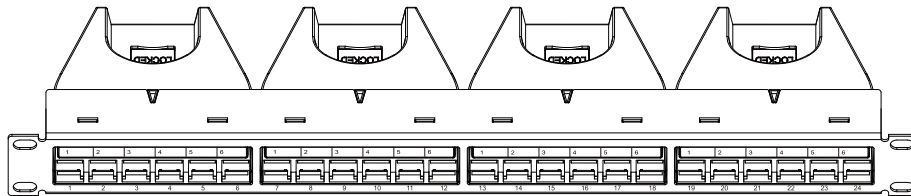


Front View


1. Pull the latch back to "UNLOCKED" position to release cassette from panel.

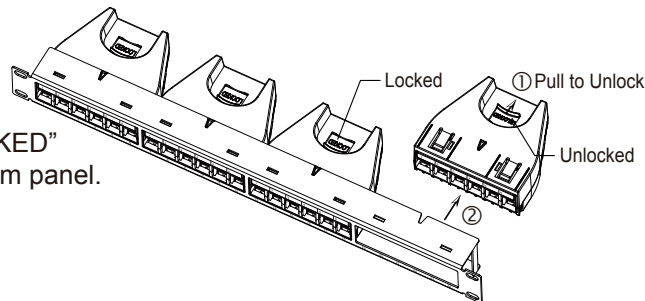


2. Use flat screw driver to open the cassette. Unscrew and take out the cable fixture.

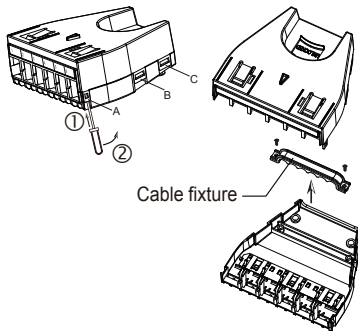

3. Allocate the cable assembled modules into cassette in sequence. After all modules are installed, screw on the cable fixture back and close the cassette.

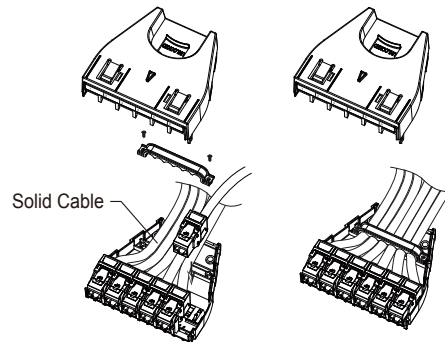

4. Make sure the latch on cassette is still at "UNLOCKED" position and slide the cassette into panel. After cassette is in the desired position at the panel, push the latch forward to "LOCKED" position to secure the cassette on panel.

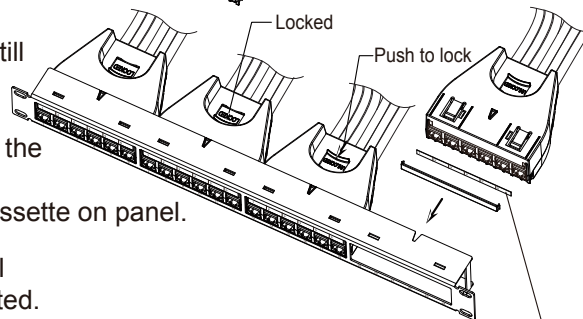

5. Repeat the above procedure until all four cassettes installation is completed.

Write on description label
protected by clear plastic cover.

AT&T Authorized Licensee. AT&T, the AT&T Globe Design and all other AT&T marks contained herein are trademarks of AT&T Intellectual Property and/or AT&T affiliated companies.

Issue 1.1 19/03/2013