

AT&TCopperLine Installation Manual

AT&T CopperLine Category 6


RJ45 Unshielded Punch-Down Straight Keystone Jacks

AT&T P/N 15A06NV008A-WB61




Strip 30 mm of the jacket.

Step 1



Press the wires through the slots.

Step 2

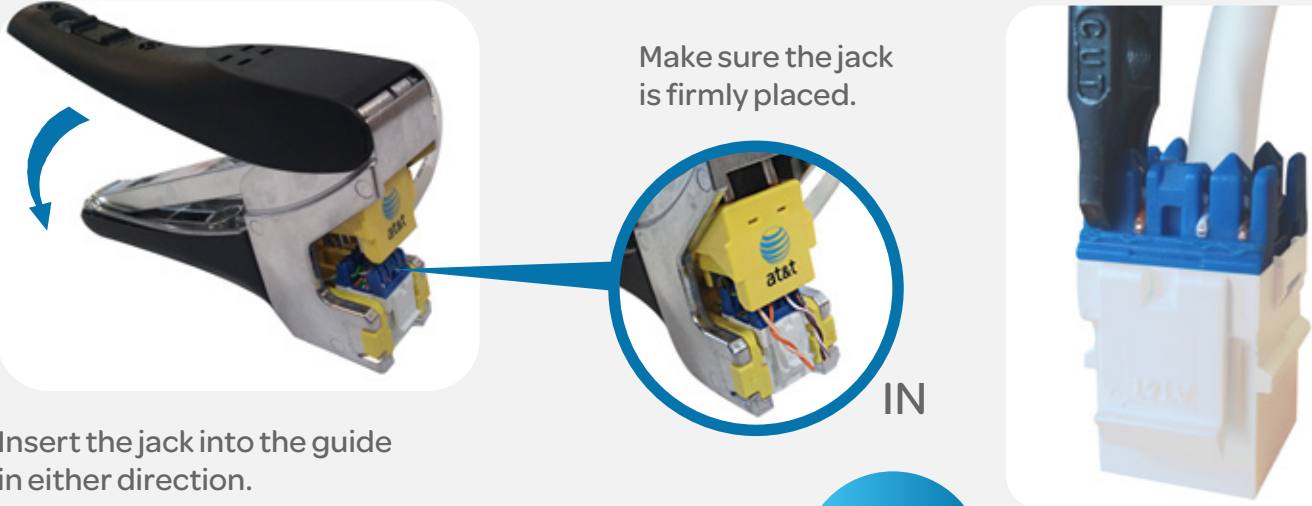

Insert the jack into the guide in either direction.

Make sure the jack is firmly placed.

Step 3

IN

Terminate wires with punch down tool. Make sure the tool cuts off the excess wires.



Place cap on jack and press to make sure it is fully seated. The cap opening allows the cable to move from side to rear.

Step 4