


AT&T CopperLine Installation Manual

AT&T CopperLine Category 6A

RJ45 Unshielded Punch-Down Angled Keystone Jacks


AT&T P/N 15A6ANV008B-WK61

STEP 1:

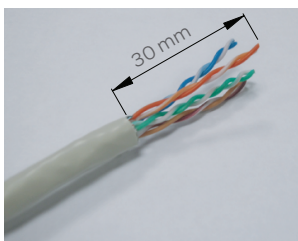



Strip 30 mm of the jacket.

STEP 2:

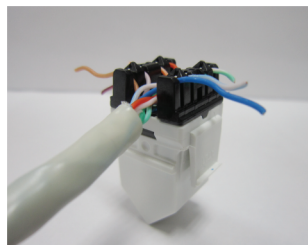


Press the wires through the slots.

STEP 3:

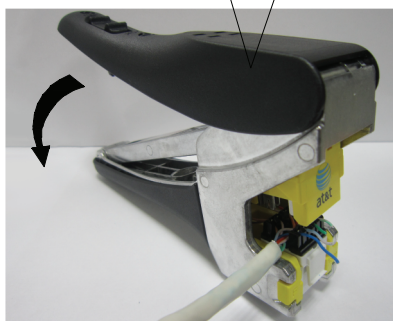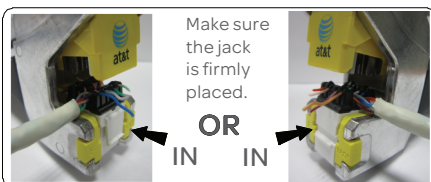


Insert AT&T jack into the guide in either direction.

OR

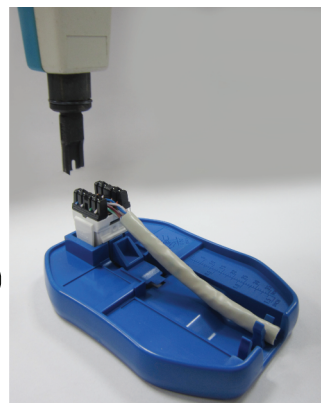

Terminate wires with punch down tool. Make sure the tool cuts off the excess wires.

STEP 4:

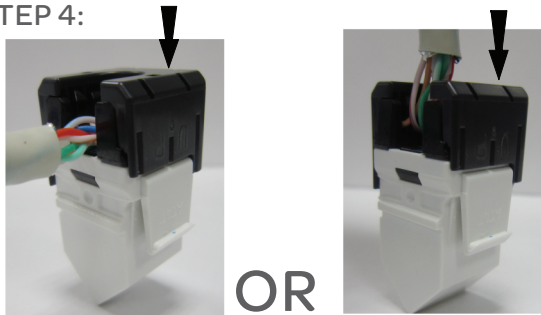

Place cap on jack and press to make sure it is fully seated. The cap opening allows the cable move from side to rear.

AT&T Authorized Licensee. AT&T, the AT&T Globe Design and all other AT&T marks contained herein are trademarks of AT&T Intellectual Property and/or AT&T affiliated companies.

Issue 1.1 12/03/2013