


AT&T CopperLine Installation Manual

AT&T CopperLine Category 6A

RJ45 Shielded Punch-Down Straight Keystone Jacks


AT&T P/N 15C6ANV008A-MK61

STEP 1:

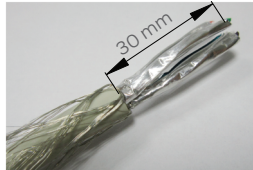



Strip 30 mm of the jacket.
Wrap the drain wire (if present) around the cable. Push the braid back.

STEP 2:

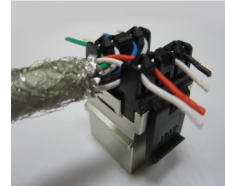


Press the wires through the slots.

STEP 3:

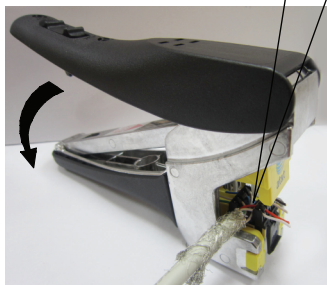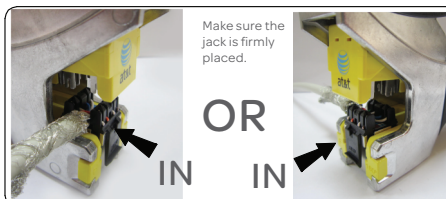


Insert the jack into the guide in either direction. Press tool to terminate the jack and cut off the excess wires.

OR

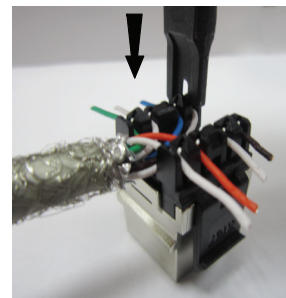

Terminate wires with punch down tool. Make sure the tool cuts off the excess wires.

STEP 4:

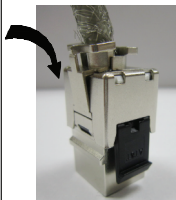

STEP 4-1:
Place the cap on the jack and press to make sure it is fully seated. Put the hinged side cover into the slot.




STEP 4-2:
Snap the side cover to the jack. Make sure it clicks.



STEP 4-3:
Fix the cable tie to the shielding lug. Make sure the ground wire and the braid are securely bonded.

UNLOAD

STEP 1: Cut off the cable tie.

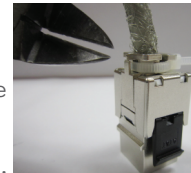

STEP 2:
Insert a small slotted screwdriver into the cable opening and lift to remove the side cover.

STEP 3:
Insert a small slotted screwdriver into the gap and lift to remove the Shielding Cap.

