


## AT&T CopperLine Installation Manual

8P8C RJ45 Shielded CAT6A PD 180° Keystone Jack Angled

AT&T P/N 15C6ANV008B-MK61


### Assembly instructions

**Step 1:**

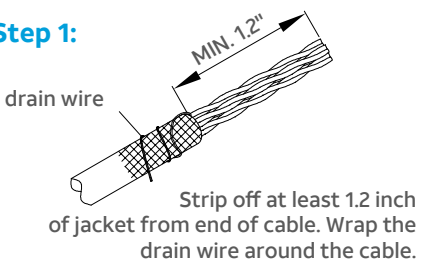


Strip off at least 1.2 inch of jacket from end of cable. Wrap the drain wire around the cable.

**Step 2:**

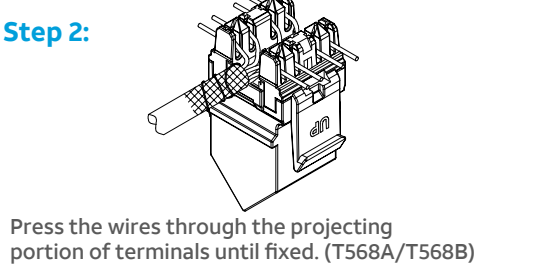


Press the wires through the projecting portion of terminals until fixed. (T568A/T568B)

**Step 3:**

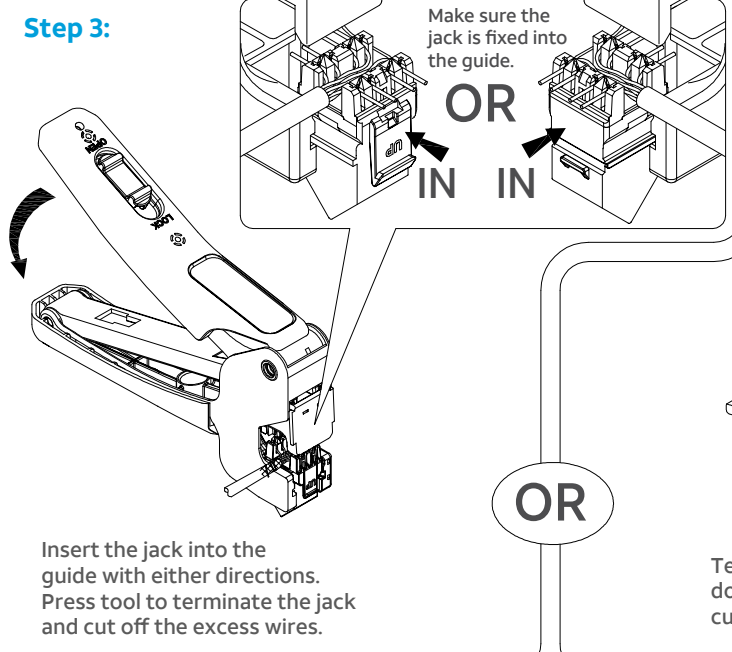


Insert the jack into the guide with either directions. Press tool to terminate the jack and cut off the excess wires.

**OR**

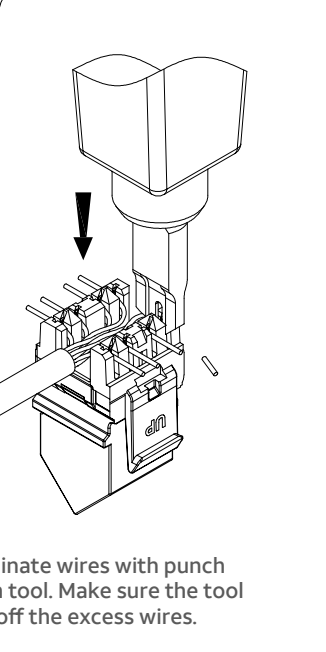


Terminate wires with punch down tool. Make sure the tool cuts off the excess wires.

**Step 4-1:**




Place the cap on the jack and press to make sure it is fully seated. Put the hinged side cover into the slot.

**Step 4-2:**



Snap the side cover to the jack.


**Step 4-3:**

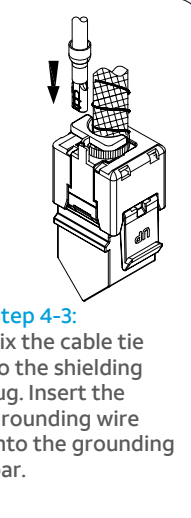

Fix the cable tie to the shielding lug. Insert the grounding wire into the grounding bar.

**Disassembled**

**Step 1:** Cut off the cable tie.

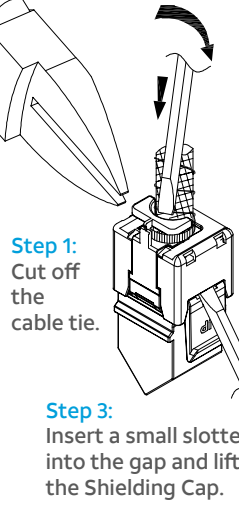

**Step 2:** Insert a small slotted screwdriver into the cable opening and lift to remove the side cover.

**Step 3:** Insert a small slotted screwdriver into the gap and lift to remove the Shielding Cap.